



SECTION - EXISTING T-LOCK LINER

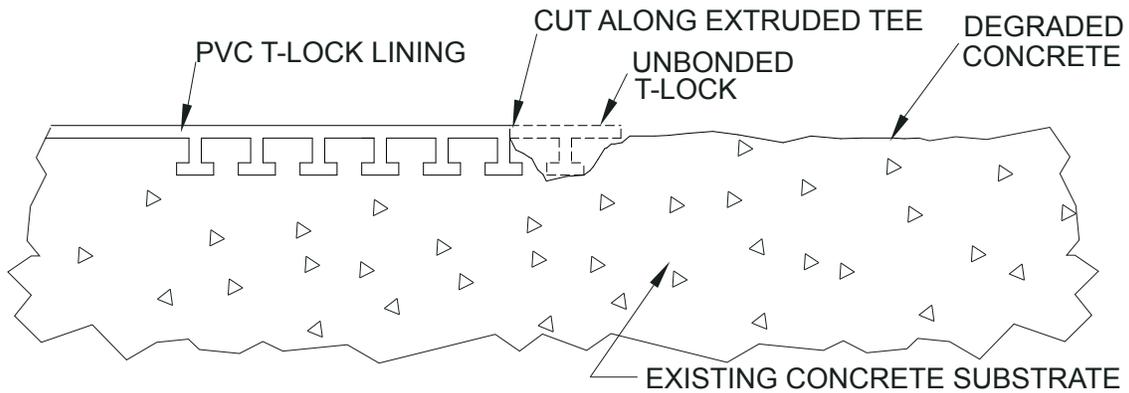

SECTION - TERMINATING PERMA-SHIELD AT EXISTING T-LOCK

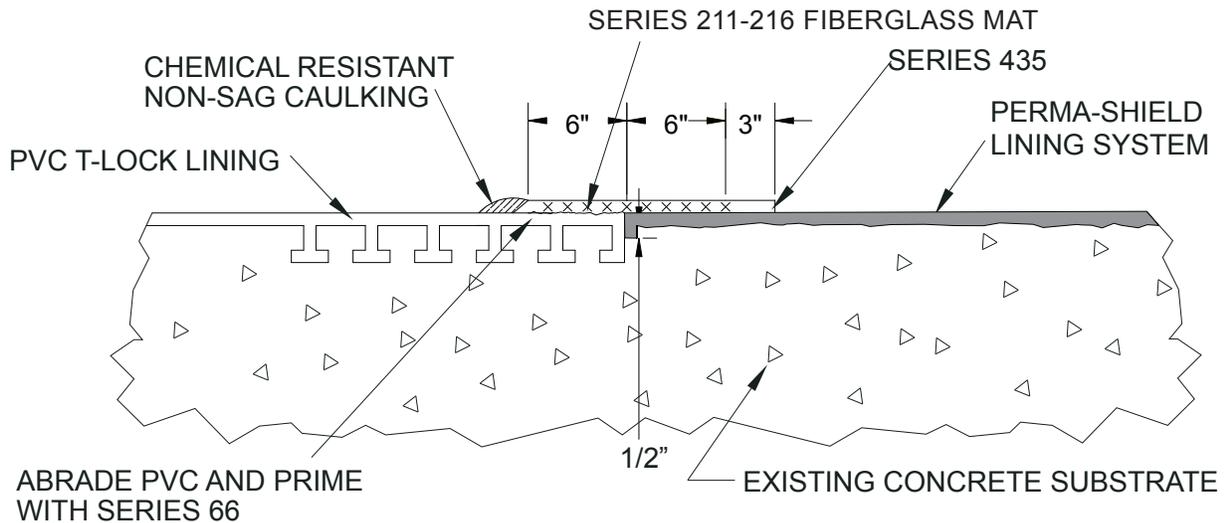

Notes:

1. Apply 10 mils of Series 435 and press fiberglass mat reinforcement into it extending mat 6" each way shown.
2. Apply additional 10 mils of Series 435 to encapsulate fiberglass mat reinforcement.

N.T.S.

TNEMEC PERMA-SHIELD STANDARD LINING DETAILS

TERMINATION AT EXISTING T-LOCK LINER

NO. PLS-6

REV.1